



## Introducing the New “Dancer Function” with AIBO MIND 2 SP3

In May 2005, the new “Dancer function” was added to the “AIBO MIND 2” software.

When you play music for the AIBO® Entertainment Robot ERS-7, it performs various dances in sync with the rhythm and volume of the music. Try playing your favourite music and enjoy watching how the AIBO robot dances around happily.

### AIBO Custom Manager 2

AIBO Custom Manager 2 (for AIBO MIND 2 software) is a PC utility for taking AIBO Custom Data (content) downloaded from the Web, and adding it to the “AIBO MIND2” AIBO-ware. Custom Data can contain **Service Packs**, new motions, sounds, and games that can be added to “AIBO MIND 2” software.

AIBO Custom Manager 2 can be downloaded from [www.eu.aibo.com](http://www.eu.aibo.com) (Downloads page)

#### Notes

- AIBO MIND 2 Service Pack 3 includes AIBO MIND 2 Service Packs 1 and 2. Prior installation of these Service Packs is therefore not required.
- For more on handling and operating the AIBO robot, refer to the separate “User’s Guide (Basic).”
- When operating under the Dancer function, the AIBO robot does not respond to the pink ball, the AIBOne toy, your face, your favourite things, or AIBO cards.
- The AIBO robot does not charge automatically, even if its remaining battery power is low.
- The Dancer function can also operate while the AIBO robot is on the Energy Station. But when the AIBO robot is taken off or placed on the Energy Station, the Dancer function turns off.
- In the puppy stage, the Dancer function cannot be used.

## How to Enjoy the Dancer Function

- 1 Say “Feel the rhythm” or “Feel the music” while the AIBO robot is in Autonomous mode.  
The AIBO robot’s head light begins to flash orange.
- 2 Touch the head sensor, or say “Feel the rhythm” or “Feel the music” again.  
The mode indicators turn each of the six colours in order.  
(While the Dancer function is operating, the mode indicators continue to turn each of the six colours.)
- 3 Play your favourite music.  
The AIBO robot begins keeping the rhythm and dancing in time to the music.



#### Hints

- The AIBO robot may not be able to dance well to certain types of music.
- If you leave the AIBO robot operating under the Dancer function for 30 minutes or more, the AIBO robot stops dancing (but the mode indicators continue to turn each of the six colours). When this happens, touch the back sensor or head sensor to make the AIBO robot begin dancing again.

### To Turn Off the Dancer Function

Touch the head sensor for at least 3 seconds, or touch the chin sensor.