

# SONY®

## Getting Started

GB



Network Media Player  
NSZ-GS7

Google TV™ 

Screen images, operations, and specifications are subject to change without notice.



## Getting Started:

**ON/STANDBY**  
Turns the player on or off.

## Control connected devices with one remote:

- To use this function, make sure that the player is on.
- For details on the settings for the remote code, see "Help Guide" (page 14).

**ON/STANDBY (TV/AMP)**  
Turns on or off the TV/AV Receiver.

**INPUT (TV/AMP)**  
Changes inputs.

**GUIDE\*1**  
Displays the TV Programme Guide.

**PVR\*2**  
Displays the PVR (Personal Video Recorder) menu.

**TV\*1**  
Displays Live TV.

\*1 Available only when the player is connected to a Set Top Box.

\*2 Available only when the player is connected to a Set Top Box with the PVR function.

## To control your AV Receiver:

**Function**  
Keys with orange dots will be available for use in providing AV Receiver control when the Function indicator is on.

## Volume/Programme Positions Control (on the side):

-  **VOLUME**  
Turns the volume up or down.
-  **MUTING**  
Silences the sound

-  **PROGRAMME POSITIONS\***  
Selects the next (+) or previous (-) programme positions.  
\* Available only when the player is connected to a Set Top Box.

## Basic Control:



Displays two pictures, such as a TV programme and a website, on the screen, simultaneously (page 11).



Returns to the previous display, or exits the application.



Opens the Home screen (page 6).



Displays special options associated with each feature.

## Playback Control:




These keys are available when videos, music, or photos are playing. The  and  keys work only when they are held down continuously (not tapped).




## Operate intuitively with a touch-pad:


You can click, scroll, drag and drop, and zoom in/out with your remote.

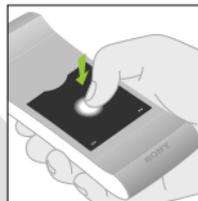


Click

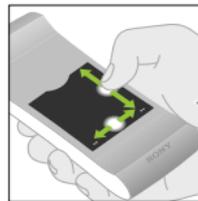


Scroll vertically & horizontally

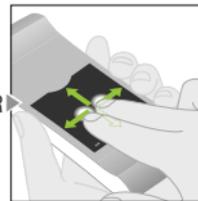


OR

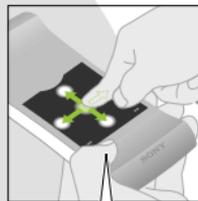

Drag & drop

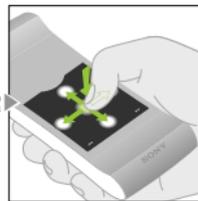

OR

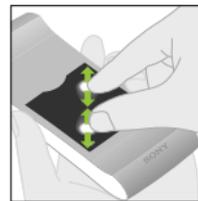

Zoom in/out



Press and hold the  button to drag an item, then release the button to drop it.

See "Help Guide" (page 14) for more gestures and detailed explanations.

## Using the special keys:



**Search**

Type your query in the Quick Search Box, and the player will suggest content from various media.



**Bookmark**

Bookmarks your favourite content.



## Other keys:



**Function**

Keys with orange markings will be available when the Function indicator is on.



**Shift**



**Language Selector**

## When using in the dark:



Turns the backlight on and off\*.

\* You can set the backlight to be turned on and off automatically from "Settings" (see "Help Guide" (page 14) for details).

Please note that battery power drains quickly when using this function.

## Control with motion:



Motion control is available when you are launching compatible applications.

# Home

Access each feature from here



You can access various content and applications from the Home screen. The Home screen contains Notifications, All Apps, and shortcuts to select applications and websites.



The Home screen can be customised to suit your preferences. You can arrange the Home menu, add widgets to the Home screen, and change the wallpaper.







# Google Chrome

## Browse websites

This player uses Google Chrome™ as its web browser. You can access all your favourite websites with the Google Chrome web browser.

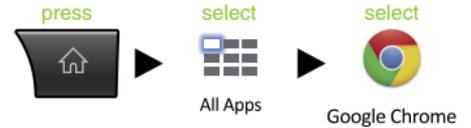


Websites can be bookmarked, and you can access bookmarks from the browser menu. You can also add a shortcut of a website to All Apps.

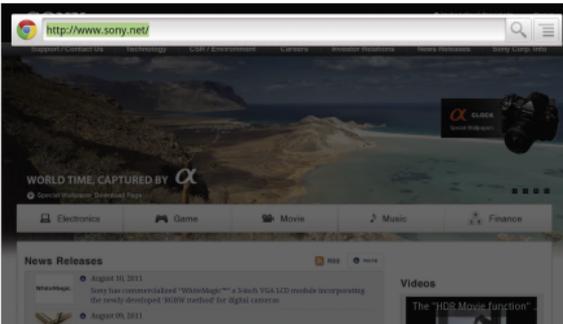



## All Apps


## Enjoy installed applications

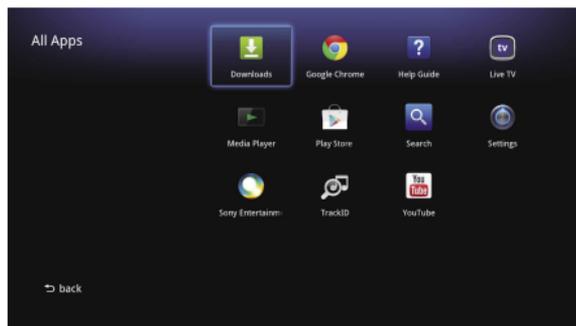


You can access all applications installed on your player from the All Apps list. You can launch applications including Live TV, Media Player, and Help Guide from here.



Applications or bookmarks in the All Apps list can be uninstalled, hidden, or removed, depending on what you select.

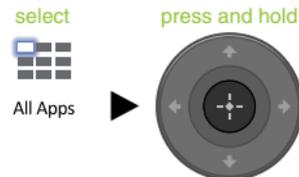

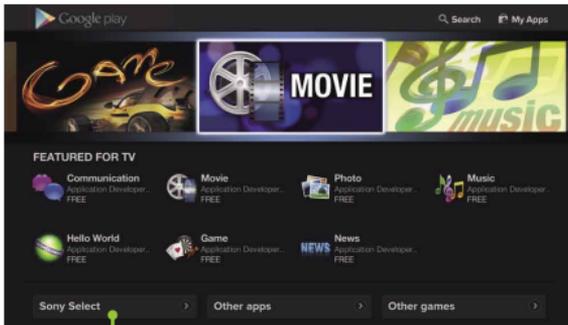

Access applications that Sony recommends from the Sony Select tab.

Google Play™ can provide you with additional favourite applications.

You can download applications and instantly use them on your player. Downloaded applications are stored in All Apps.



You can check the progress of downloads.





## Media Player

## Play files from USB devices/internal memory



You can play back audio/video/image files stored on a USB device (for details, see the Help Guide (page 14)), using Media Player.



You can select a device and change its settings.




Photos, music, and movies can be downloaded from websites and stored in the Download folder in the internal memory or USB storage devices.



## Picture-in-Picture

Enjoy applications and websites while watching TV

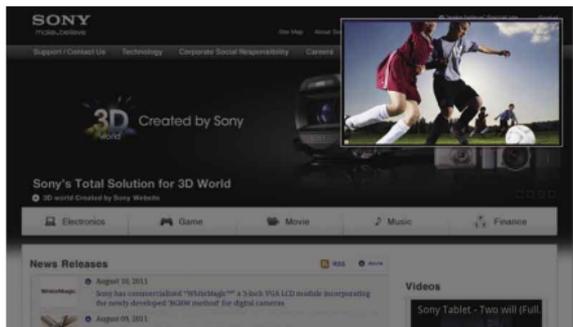

PIP (Picture-in-Picture) is a feature that allows you to display the TV screen in a smaller window (a sub window). For example, you can browse the Internet on the full screen, while watching a TV programme in a sub window at the same time.

press



You can change the size and position of the sub window.

hold



This function is available only when you watch pictures output from a Set Top Box or PVR.



# Settings

## Customise your player



You can change various settings for your player from the Settings menu.



You can also access the Settings menu from the menu that appears when the Home screen is displayed.





## Media Remote

Use your smartphone or tablet  
more effectively



Download the free “Media Remote” app to your Android™ phone, Android™ tablet, or iPhone.



Scan for Android




Scan for iPhone

Using Media Remote, you can use the device as a remote for the player, search for music that is being played, or send websites displayed on the device to the TV.



## Help Guide

Learn more about your player

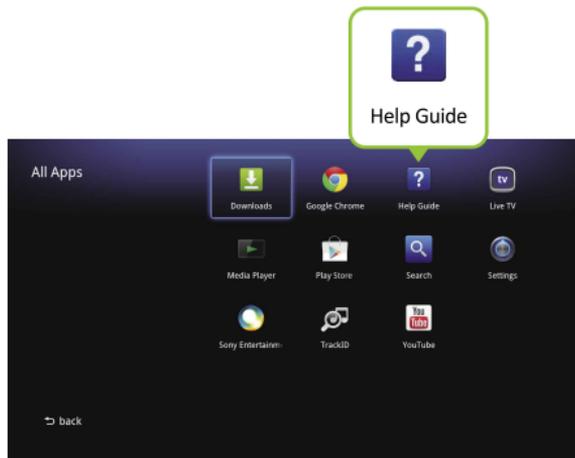

The Help Guide gives you detailed information on how to use the player.



You can also access the Help Guide from a PC browser.

**<http://www.sony.net/helpguide/r/networkplayer/>**





© 2012 Sony Corporation

Printed in China

4-421-776-11(1)



## Trademark Information

- Google TV, Google Chrome, Google Play, Android and their respective logos are trademarks of Google Inc.
- iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers. ™ and ® marks are not indicated in this document.