

Digital HD Video Camera Recorder

The following describes the functions provided/changed by this firmware update, and how to operate them.

Please refer to the “Operating Guide,” and the “Handbook”.

Setting items

Items	Display	Default setting
Recording Mode	VIDEO	HQ (1920×1080/30p)
SteadyShot	STEDY	ON
Field Angle	ANGLE	120°
Flip	FLIP	OFF
Scene	SCENE	NORML
Interval Photo Recording	LAPSE	5sec
Smart Remote Control	Wi-Fi	ON
Copy*	SHARE	—
GPS Log (HDR-AS30V only)	GPS	ON
Airplane Mode	PLANE	OFF
Auto Power Off	A.OFF	60sec
Beep	BEEP	ON
Date & Time Setting	DATE	2013/1/1 00:00 GMT+0
Daylight Saving Time (Summer Time) Setting	DST	OFF
USB Power Supply	USBPw	ON
Switching NTSC/PAL	V.SYS	NTSC
Resetting the Settings	RESET	—
Format	FORMT	—

* You can change the mode by operating your smartphone when the camera is set to the smart remote control function.

Flip



You can record the image upside down. This function is useful when the camera is attached upside down.

To make the setting, select [SETUP] first.

- 1 Press the NEXT button to display [SETUP], then press the ENTER button.
- 2 Press the NEXT button to display [FLIP] (Flip), then press the ENTER button.
- 3 Press the NEXT button to select the setting, then press the ENTER button.

		Flips the image vertically and swaps the left and right sound channels.
✓		Does not flip the image.
		Returns to the [FLIP] menu.

About the flip function

When the Flip is set to [ON], [FLIP] is displayed on the setting information when the shooting mode is changed.

When using the camera in the normal position, images are recorded upside down.

Daylight Saving Time (Summer Time) Setting



You can set the camera's clock to the Daylight Saving Time.

To make the setting, select [SETUP] first.

- 1 Press the NEXT button to display [SETUP], then press the ENTER button.
- 2 Press the NEXT button to display [DST] (Daylight Saving Time), then press the ENTER button.
- 3 Press the NEXT button to select the setting, then press the ENTER button.

		Sets the Daylight Saving Time.
✓		Does not set the Daylight Saving Time.
		Returns to the [DST] menu.