


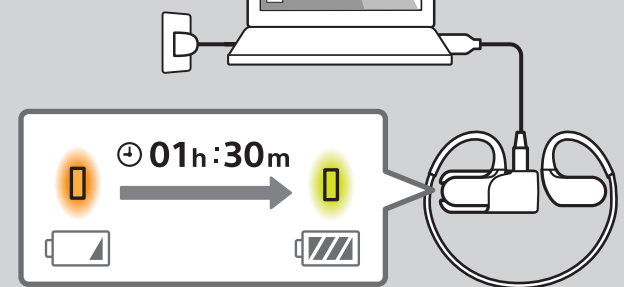
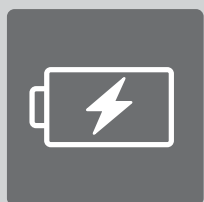


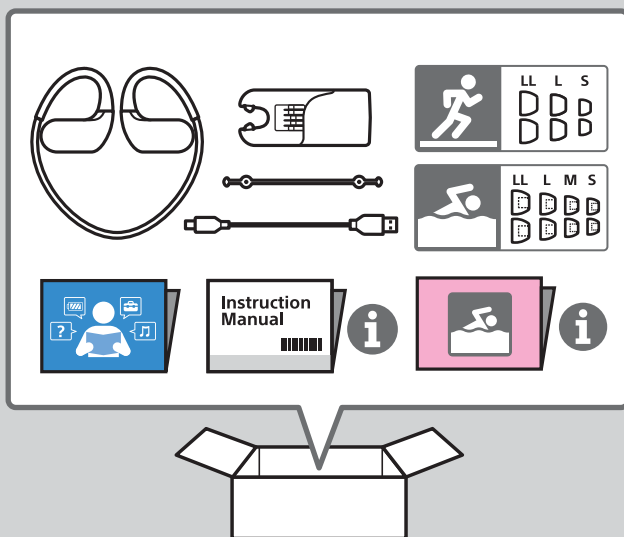





©2016 Sony Corporation

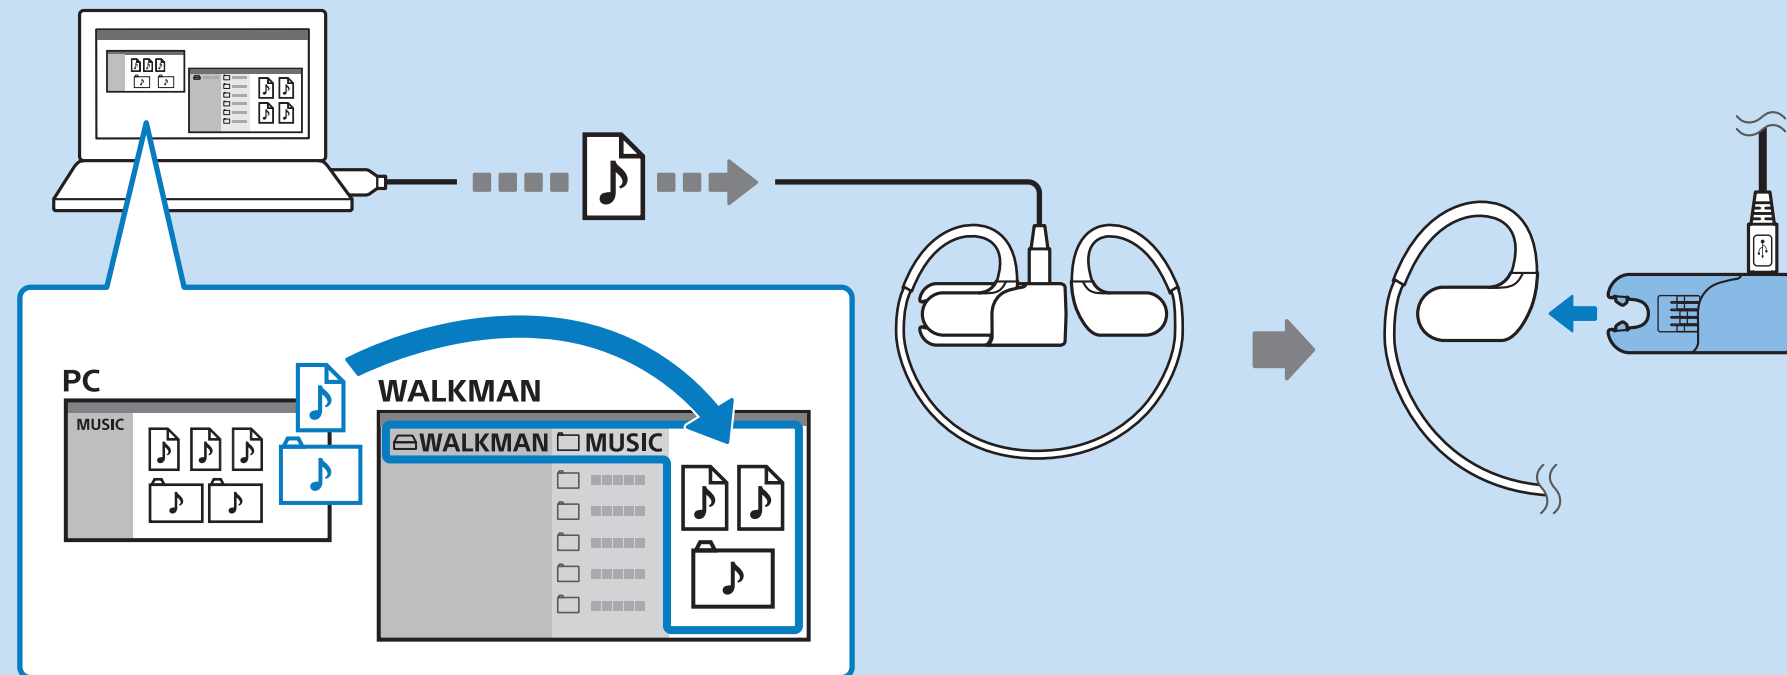

1



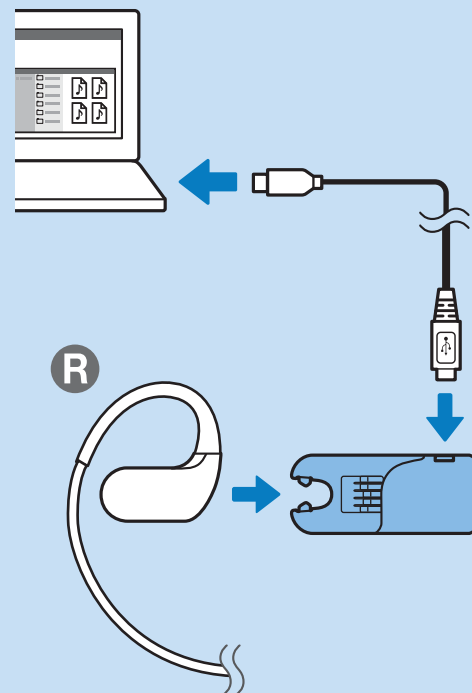


2


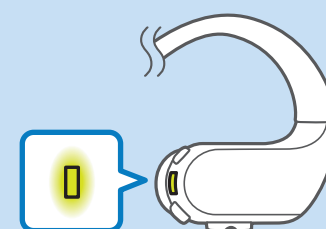
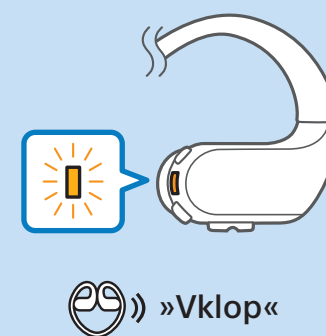
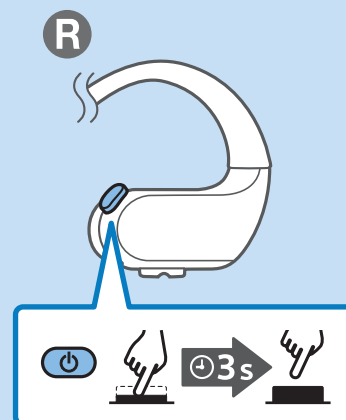
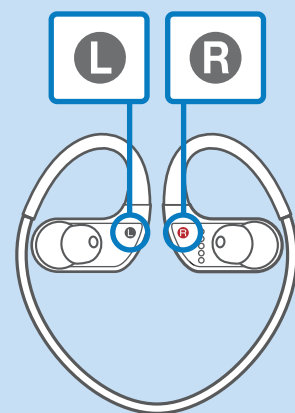


 »Vklop«





3

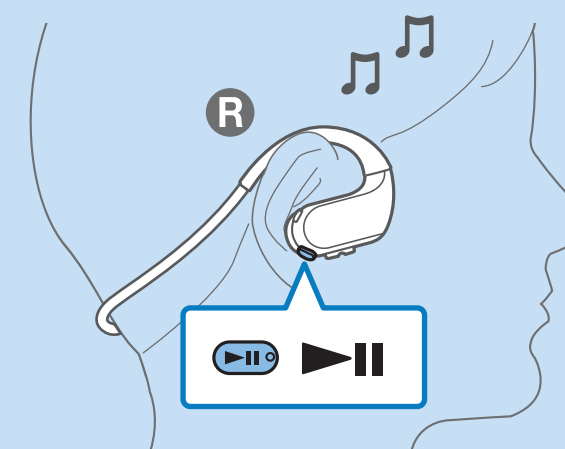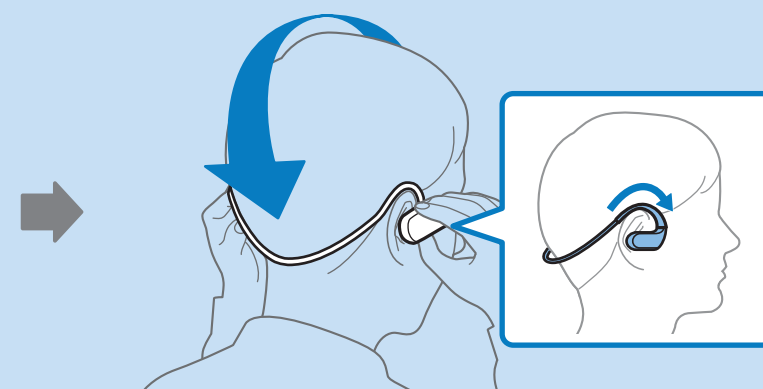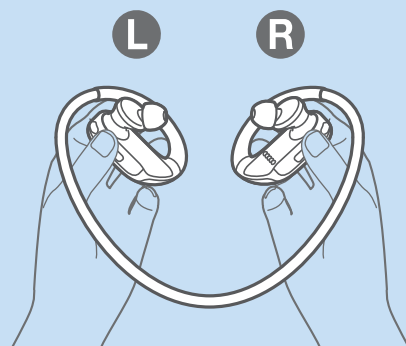

 »Predvajanje«

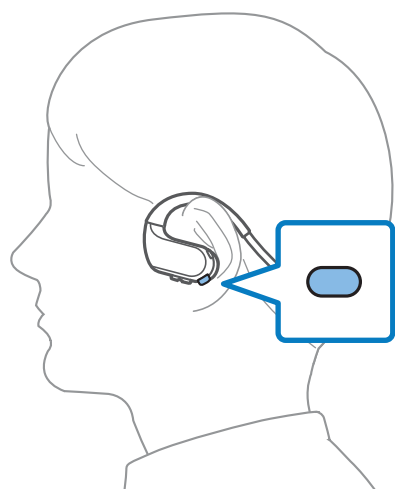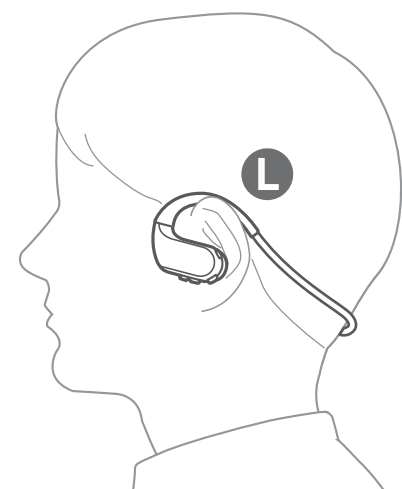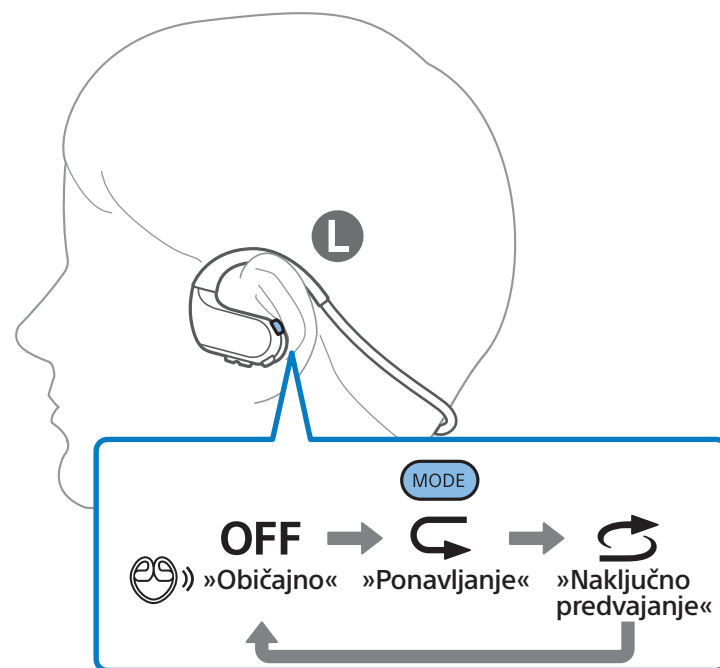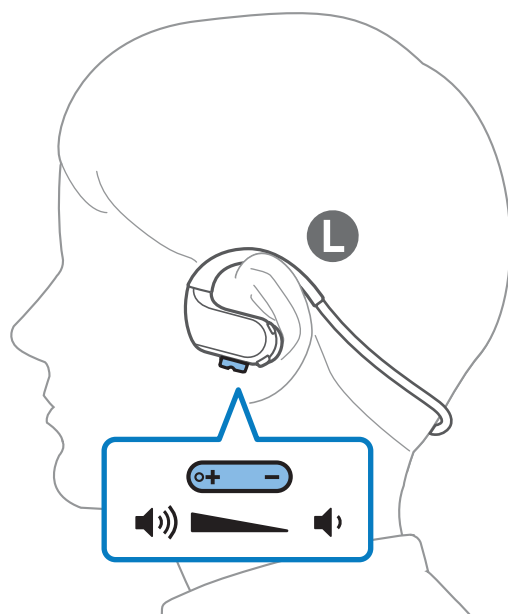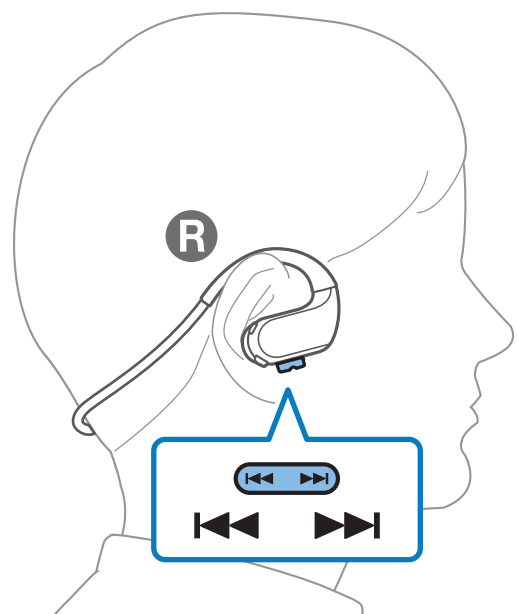

»Vklop«

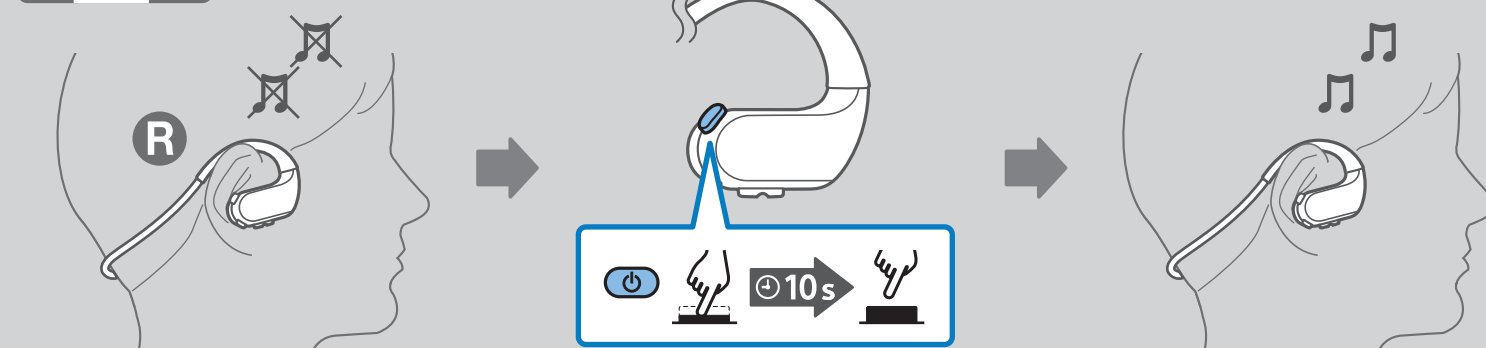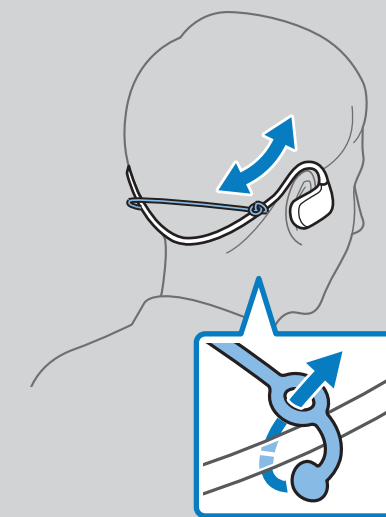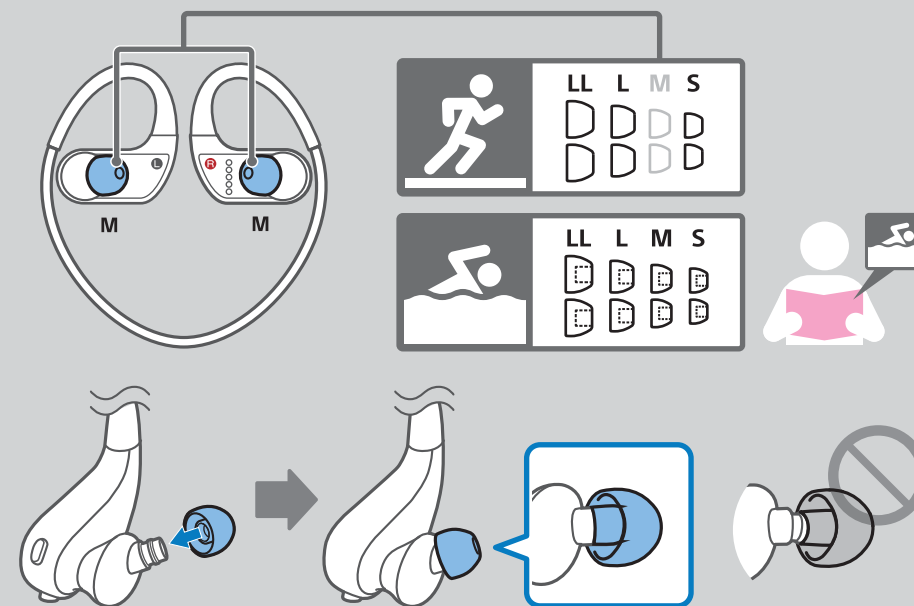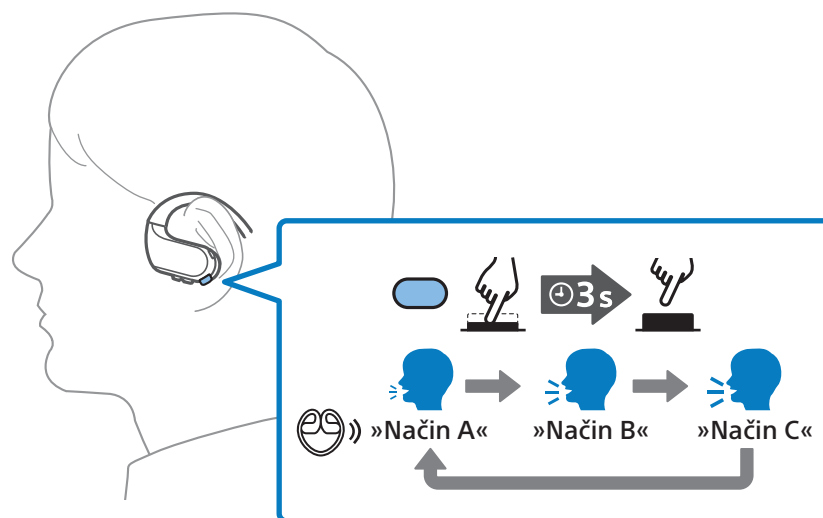

Windows



Mac



http://rd1.sony.net/help/dmp/nwws410/h_ww/

