


Sony Freeview product: Auto tune Guide.

Please be aware that the instruction manual supplied with your Freeview product will guide you through the Auto-tuning procedure of your specific model.

Also on some Sony digital TV models an Auto-tuning button (see below) can be found on the TV's own control panel.

This button can be found either at the front, top or the side of the set, and sometimes it will be behind a control door or flap.

If the model you have has this button you will only need to press it, the TV will then automatically auto-tune and you will have no further need to go through this guide.

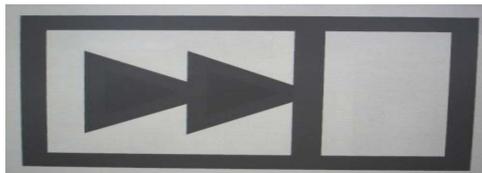

If however you would prefer to be guided by the following information then please continue.

This guide will cover all Sony Freeview products, which include: Television. Set top box and DVD recorders.

Sony Freeview Television idTV

(All idTV types Inc CRT/LCD/PLASMA/REAR PROJECTOR etc)

One of the following three EPG (Electronic Programme Guide) types will enable you to identify your Freeview TV.

This guide has been designed to help prevent you from having to obtain a specific model number from the rear of the TV. We do understand that having to obtain a model number is not always an easy thing to do once the TV has been installed into a cabinet/stand or wall mount.

By identifying which type of EPG layout your TV has, you will then be able to auto tune your product by following this guide.

Please start at STEP 1 until you are able to identify your specific model.

STEP 1

**Press the EPG button on your TV remote control
(Electronic Programme Guide)**

This button can be identified on the remote control by a picture that looks like an open TV guide or book.



EPG Type 1

If your EPG (see picture above) page has the letter **V** followed by numbers at the top right hand corner of the screen (e.g. V4.96) then your TV has now been identified, please now go straight to option **A** below which will guide you through auto-tuning.



EPG Type 2

If your EPG (see picture above) page has a TV picture at the top right hand corner, plus red green yellow and blue options at the bottom of the screen, then your TV has now been identified, please now go straight to option **B** below which will guide you through auto-tuning.



EPG Type 2.5

If your EPG (see picture above) page has red green yellow and blue options at the bottom of the screen but unlike the EPG Type 2 above has no TV picture at the top right of the screen, then your TV has now been identified, please go straight to option C below which will guide you through auto-tuning.

STEP 2

Option A

Press the EPG button to close the EPG.

Press MENU and by using the cursor controls on your remote control, go down to the ICON which looks like a SUITCASE or TOOL BOX.

Using the cursor control, go to the right to the AUTO PROGRAMME option.

At the AUTO PROGRAMME option press OK and then press OK again to AUTO-TUNE your TV.

Option B

Press the EPG button to close the EPG.

Press the INFORMATION button.

This button can be identified by having a picture of the letter (i) and a + symbol.

Press the BLUE button on the remote control, then by using the cursor controls, go down to the AUTO TUNING option and then press OK.

To AUTO TUNE press the RED BUTTON.

Option C

Press the EPG button to close the EPG.

Press the MENU button.

Using the cursor controls go down to the ICON that looks like a SUITCASE or TOOL BOX.

By using the cursor controls on your remote control go to the right, to DIGITAL SET UP.

Once at DIGITAL SET UP press OK.

Now select the DIGITAL TUNING option by taking the cursor up to the picture of a SPANNER.

Press OK to select DIGITAL AUTO TUNING.

To AUTO TUNE press OK.

Sony Freeview Set Top Box

(Model VTXD800 only)

Select the correct AV input on your TV for your SET TOP BOX.

Press MENU on the SET TOP BOX remote control.

Using the cursor controls go down to the TUNING option.

Take the cursor to the right, and then select YES.

To AUTO TUNE press OK.

Sony Freeview DVD/HDD recorders

Select the correct AV input on your TV for your recorder.

Press SYSTEM MENU on your RECORDER'S remote control.

Using the remote control cursor controls go down to SET UP, Press ENTER then go to DTV SETTINGS.

Press ENTER and go to TUNING.

Press ENTER then select AUTO TUNE.

Press ENTER to AUTO TUNE.

